


CALIBURN

User Manual

UWELL CALIBURN G4 PRO Pod System

Product Introduction

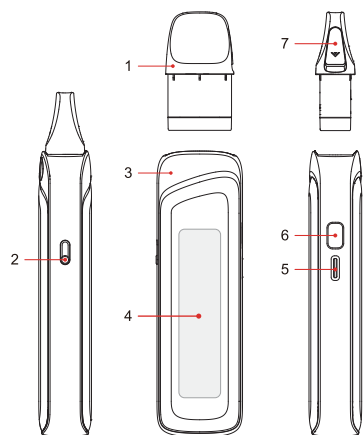

- | | |
|-----------------------------|-------------------------|
| 1. Cartridge | 5. TYPE-C charging port |
| 2. Airflow adjustment valve | 6. Button |
| 3. Main unit | 7. Filler plug |
| 4. Touch screen | |

Product Specification

- Main material: PCTG, aluminum alloy
- Dimension: 120.7 * 30 * 18.5 mm
- Net weight: Approximately 78 g
- Capacity: 3.0 ml
- Maximum output power: 35 W
- Cartridge specification: 0.4 Ω / 0.6 Ω / 0.9 Ω / 1.2 Ω
- Cell capacity: 1800 mAh


Quick Start Guide

1. Take the cartridge off the device, then remove the insulating film from the bottom.
2. Open the filler plug for filling and after that, insert the cartridge into the main unit and keep it stand for 10 minutes.
3. Press the button five times consecutively within 2 seconds to turn on the device and take a drag to vape.

Detailed Instructions for Use

1. Filling

- a. Remove the cartridge and tear off the insulating film at the bottom before use for the first time.
- b. Open the filler plug and fill.
- c. Put the filler plug back on.
- d. Insert the cartridge into the main unit.

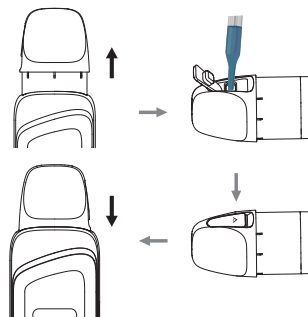


Precautions:

- a. Insert the drip tip of the bottle into the filling slot before filling.
- b. DO NOT leave the filling slot open for a long time. After filling, immediately put the filler plug back on and make sure it is pressed in place to prevent leakage.
- c. After filling a new cartridge for the first time, please let it stand for 10 minutes before use to prevent damages to the pod caused by operation without e-liquids.
- d. When the remaining e-liquid in the cartridge is below the "MIN" level, please refill in time.

2. Airflow adjustment

Adjust the flow rate via the airflow adjustment valve on the side.

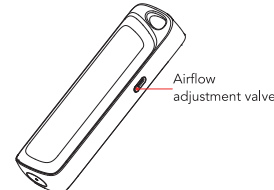

UWELL

©2025 By SHENZHEN UWELL TECHNOLOGY CO., LTD.
All Rights Reserved.

3. Startup/ shutdown

Press the button five times consecutively to turn on/ off.

4. Cartridge insertion/ removal

- a. When the cartridge is inserted, shake once and display the current cartridge resistance and power range.
- b. When the cartridge is removed, shake once.

5. Vaping

Take a drag to vape when the device is turned on. The screen will display animation and the number of seconds.

6. Home screen quick actions

Pull up to unlock, swipe left/ right to switch theme, pull down to enter menu, keep swiping right for 5 seconds without any operation to return.

6.1 Screen locking/ unlocking

- a. When the screen is on, press the button once or do nothing for 3 seconds (user-definable), to lock and turn off the screen.
- b. When the screen is off, press the button once to turn it on. Click on the screen to display the unlock interface and swipe up to unlock.

6.2 Theme switching

On the home screen, swipe left/ right to switch theme. Unlock the locked theme by accumulating puff counts and after reaching the counts to trigger and unlocking, switch to the new theme automatically.

6.3 Mode switching

On the home screen, click the mode display area to enter the mode switching interface. Click on **WAVES** / **STORM** / **CUSTOMIZE** to switch mode (in CUSTOMIZE mode, swipe up/ down to adjust points and set the output mode). Click to finish.

6.4 Power adjustment

On the home screen, click the power display area to enter the power adjustment interface. Swipe up/ down to adjust the power. Click to finish.

6.5 Puff counter reset

On the home screen, click the puff count display area to enter the puff counter reset interface. Click the button to finish.

6.6 Battery level indicator

The battery percentage will be displayed in real time based on the current battery level.



7. Menu settings

On the home screen, swipe down to call up the main menu.

- a. Pull up from the bottom of the main menu to return to the home screen.
- b. On any menu interface, swipe right to return to the previous interface.
- c. Return to the home screen if there is no operation for 5 seconds.
- d. All settings will take effect only after confirmation.

7.1 Brightness and screen-on time adjustment (Screen Display)

Click the icon to enter the brightness and screen-on time adjustment interface.

- a. Brightness adjustment: Swipe up/ down to adjust the brightness.
- b. Screen-on time adjustment (interval 3 ~ 15 seconds): Click or swipe up/ down to adjust the screen-on time.

7.2 Puff and screen-off animation switch (Animation)

Click the icon and click to switch the on/ off state of puff/ screen-off animation (appeared at regular intervals).

7.3 Power saving mode

Click the icon and click to turn on/ off the power saving mode. In the power saving mode, the screen brightness will be set to the lowest, the screen-on time will be 3 seconds, and the puff and screen-off animation will be turned off.

7.4 Clean mode (CLEAN UI)

a. Click the icon to enter the clean mode switch interface. Click to turn on/ off the clean mode.

b. In clean mode, only the battery level and custom text (Uwell Since 2015 by default) will be displayed on the home screen. Click the custom text area to call up the text editing interface.

7.5 Language switching (Language)

Call up the main menu and click the icon to enter the interface for selection.

7.6 System reset (System Reset)

Call up the main menu and click the icon to enter the system reset interface and restore factory settings.

*Unlocked themes will be relocated and all puff counts will be reset.



8. Protection and prompt

- a. Short circuit protection: When a short circuit occurs, the screen will display , the device will stop outputting.
- b. Low voltage protection: When the battery is low, the screen will display , the device will stop outputting.
- c. Over-time protection: If a puff lasts more than 6 seconds, the screen will display and the device will stop outputting.
- d. Open circuit prompt: When the cartridge is disconnected from the device or there is no cartridge, the screen will display .

Warm Reminder

1. Please use a high-quality power adapter (5V/2A) and USB cable that have passed safety certification for charging.
2. If you carry this product on a plane, please remove the cartridge from the device and pack it separately to prevent leakage due to changes in aircraft pressure.
3. Avoid high temperature, flammable and explosive articles, low temperature, water, and humid environment during use and storage. Do not store it with hard objects during transportation to prevent damage to the device. It is recommended to charge the device at least once a month to extend its life time.
4. Do not use this device in a strong static electricity environment.

WARNING

The new FDA regulations apply to the sales and distribution of all E-cig products.

1. Do not give away free samples.
2. It is prohibited to sell all types of E-cig products to people under the age of 21.
3. It is prohibited to sell all types of E-cig products in vending machines except those specified by laws and regulations.
4. It is prohibited to introduce products with "light", "low", "mild", or other similar descriptions in labels or advertisements into interstate trade.
5. It is strictly forbidden to be used by young children, pregnant women, and women during breastfeeding or patients with heart disease, hypertension, diabetes, depression, and asthma. Keep the product out of the reach of children, non-smokers, and animals.
6. Please do not drink it.
7. It may contain nicotine, which is known to be a highly addictive substance.
8. Swallowing or skin contact with this product may cause intoxication.
9. Please keep away from flammables and explosives when using or charging to avoid hazards.

10. Do not disassemble the product. The company won't be responsible for any product damage or personal injury caused by the improper operation.
11. Please consult your local vape shop or contact us through service@myuwell.com if you need help using the product.

Product Verification

- Visit UWELL's official website www.myuwell.com to verify under the SUPPORT navigation bar.
- Please scan the QR code on the package with your phone camera to verify. The result will be displayed on the page.
- Or you can enter the 16-bit anti-counterfeit code on the surface of the user manual into the input box, and the result will be displayed within seconds.

Attention:

Please keep your package and the warranty card.

Warranty Period

180 days from the purchasing date.

Warranty Parts

Device and atomizer only. Coil and pod are excluded.

Warranty Service Excluded Conditions

1. Expiration of warranty period.
2. Damage caused by failure to use, maintain and keep the product according to the requirements of the product instructions.
3. Damage caused by maintenance service personnel non-authorized by UWELL.
4. Damage caused by using inferior accessories of other brands.
5. Damage caused by the force majeure.

Warranty Service Guide

1. You can ask the shop you purchased your vaping device for the warranty service.
2. You can visit www.myuwell.com and ask for warranty service under the SUPPORT navigation bar.
3. You can contact us through service@myuwell.com if you have any questions.

Please use your phone camera to scan the QR code for further information.

